



Assembly instruction

STEP ST2069 Recessed wall mount

Edition 1




Date: 250428
Classification: PU - Public
Type: Manual
Doc No: STA-0002
Doc Name : ST2069 Assembly instruction.docx


General

ST2069 is used when you want to make a partly recessed installation of ST2020


Measurement

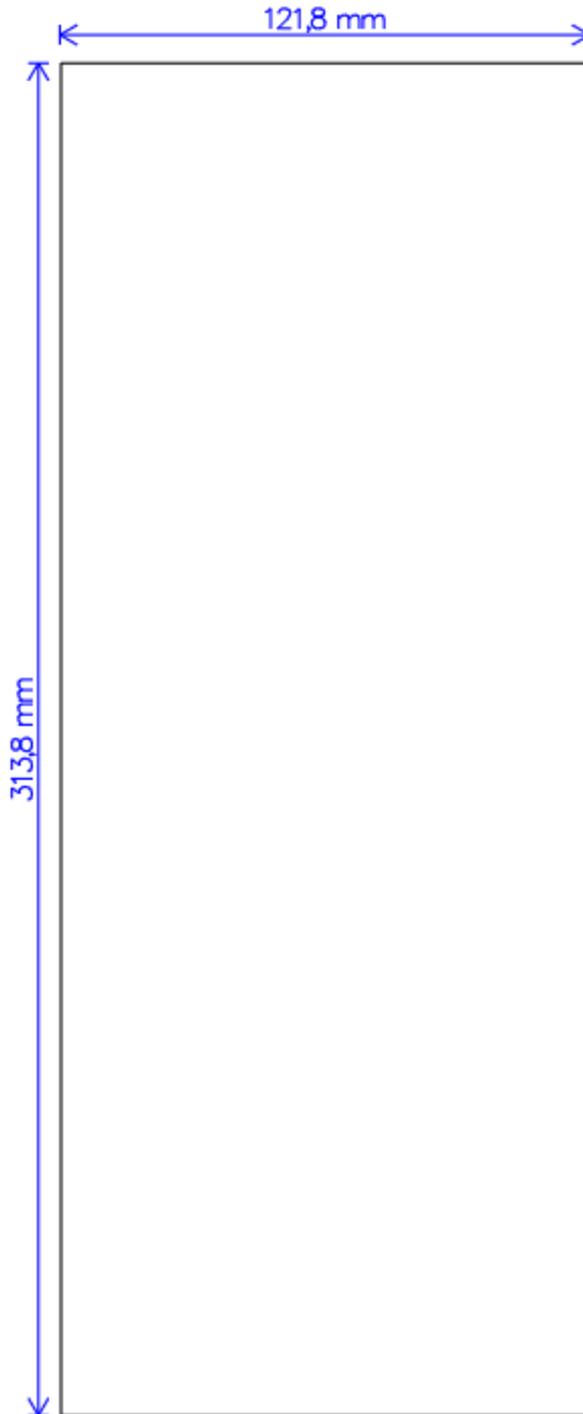


Assembly

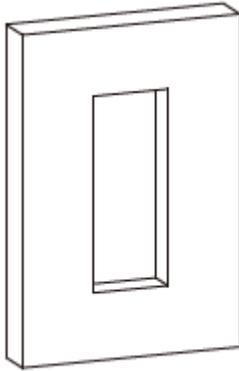


Create a wall opening based on the external dimensions provided on page 1. Note: the listed dimensions represent the actual size of the box. The opening should be slightly larger (by a few millimeters) to allow for proper fitting.

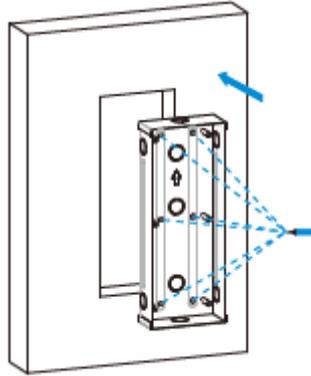


Install the flush-mounted box.

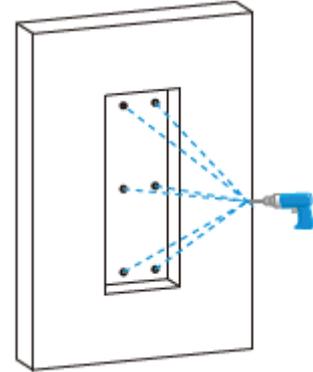

Secure the box by fastening screws through the six mounting holes in the bottom.

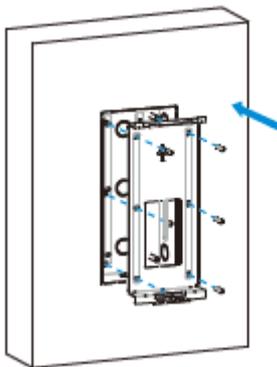

Before installing the door phone, the flush mounting bracket must be mounted inside the box.

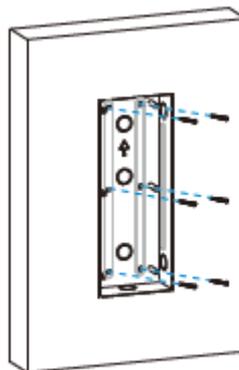

Place the flush mounting bracket inside the box and fasten it using the supplied M4 screw.